

WASHBASINS - WARNINGS AND PRECAUTIONS FOR USE, CARE AND MAINTENANCE GUIDELINES

FENIX® is a new generation of innovative materials for interior design for a broad range of vertical and horizontal applications such as in bathroom. In order to further the aesthetic harmony of FENIX, FENIX INTEGRATED SOLUTIONS offer a new FENIX Washbasins collection. The Washbasins collection is especially developed to complement FENIX vanity tops.

CARE AND MAINTENANCE

Cleaning the Washbasin can help maintain its beauty and cleanliness. Although the non-porous surface prevents liquids from penetrating inside the material, it is preferable to remove them immediately using a soft non-abrasive sponge and a common dish soap, rinsing the surface and drying carefully using a microfibre cloth.

In case of stubborn stains on light-coloured Washbasins, use a solution of bleach and lukewarm water (in ¾ and ¼ ratio), leaving it to act for about 8 hours (it is advisable to carry out this cleaning activity at night), rinsing thoroughly and then carefully drying the entire surface with a soft microfibre cloth. If the stains persist, the operation can be repeated once or twice more.

In case of stubborn stains on dark-coloured Washbasins, use common dish soap directly on the stain and with a soft non-abrasive sponge clean with small circular movements. Rinse with lukewarm water and carefully dry the entire surface with a microfibre cloth. If the stains persist, the operation can be repeated once or twice more.

In case of limescale stains, use a non-corrosive limescale remover diluted with lukewarm water. Distribute the solution homogeneously over the entire surface of the Washbasin. Then, using a soft non-abrasive sponge make small circular movements, and leave the limescale remover to have effect for a few minutes (carefully following the instructions for use on the limescale remover label). Rinse with lukewarm water and carefully dry the entire surface with a microfibre cloth.

Not observing the care and maintenance instructions contained in this manual may invalidate the warranty.

WARNINGS AND PRECAUTIONS

The following precautions must be taken into account:

- dry the surface of the Washbasin daily, avoiding prolonged deposits of water, which could lead to the formation of limescale;
- do not use detergents containing alkaline substances and aggressive liquids (such as ammonia, caustic soda, disgorging agents):
- do not remove dirt residues with steel wool pads or abrasive sponges that could damage the surface;
- do not cut or mince directly on the Washbasin surface because it could irreparably get scratched (it is advisable to always use a cutting board);
- signs of scratches and daily wear and tear are inevitable during normal use. Dark colors will show scratches, dust, ordinary wear and tear more readily than lighter colors. Avoid accidental impacts that could cause non-restorable micro-injuries;
- do not place incandescent objects or other heat sources directly on the surface of the Washbasin: they could form discoloration and/or injury stains;
- avoid pouring boiling liquids directly into the Washbasin without first opening the cold water tap and filling the bottom at least 1cm as this could damage the product. Pouring liquids in excess of 70°C (thus including boiling liquids) directly into the Washbasin without first opening the cold-water tap can damage the Washbasin;
- in order to prevent the formation of limescale stains, we recommend a descaling treatment at least once a week, an operation recommended especially for dark-coloured Washbasins.